


## Manhole Cover Installation instructions

### Installation :

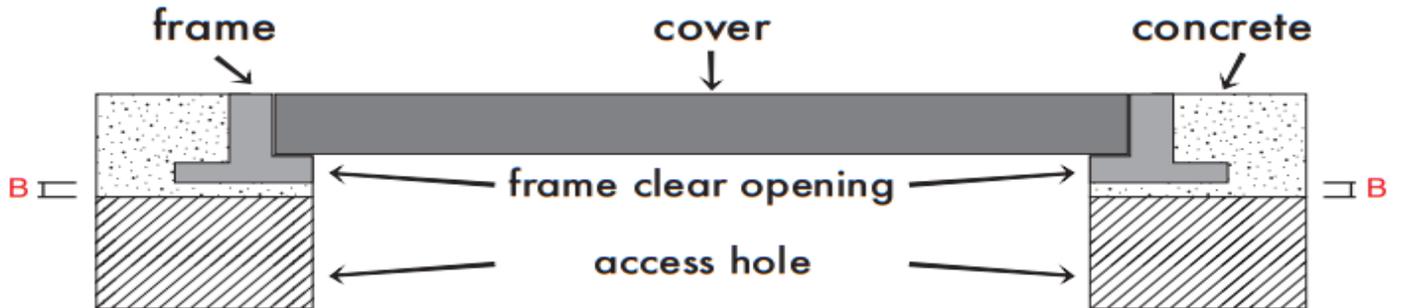

### Correct Installation :

- The concrete around the frame is C20 or over, recommended C25.
- The size of the access hole is not more than the frame clear opening.
- The thickness of bedding mortar (B) is over 20mm.
- Vehicles are not allowed to move on the cover before completing the installation stages.
- Please follow the correct installation instructions to ensure the efficiency of the product.

### Wrong Installation :

- The clear opening of the frame is smaller than the access hole.



- The product sinks under the ground level.



- The product is protruded over the ground level.

